


Classic-R

Double Glass Shelf CR3852

LALOO ACCESSORIES
SERVICE@laloo.ca
866-305-2566




Available Finishes



C chrome



clear glass

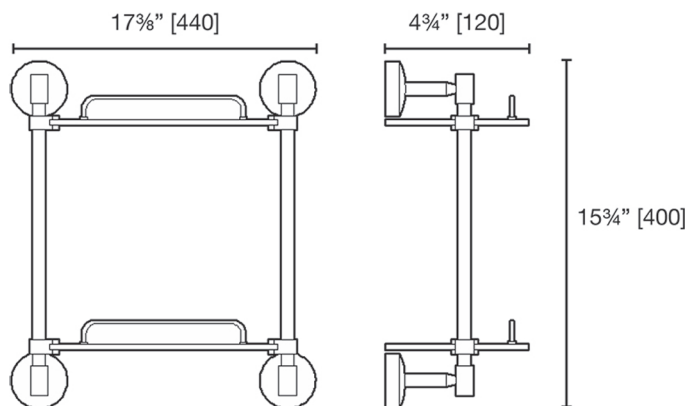


Complementary Accessories

- double robe hook
- double robe hook (inverted)
- single towel bar
- extended double towel bar
- hand towel ring
- paper holder



- double glass shelf
- triple glass shelf


- towel shelf

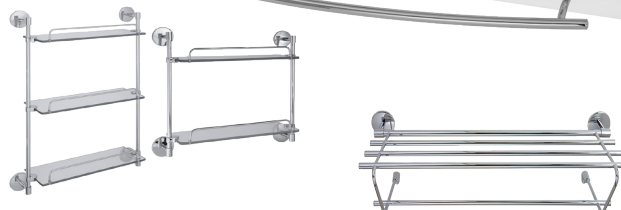

*Use metric dimensions for
greatest accuracy.
Specifications are subject to
change without notice.*

A
CELEBRATION
of ART &
FUNCTION

INSTALLING CR3852 Double Glass Shelf

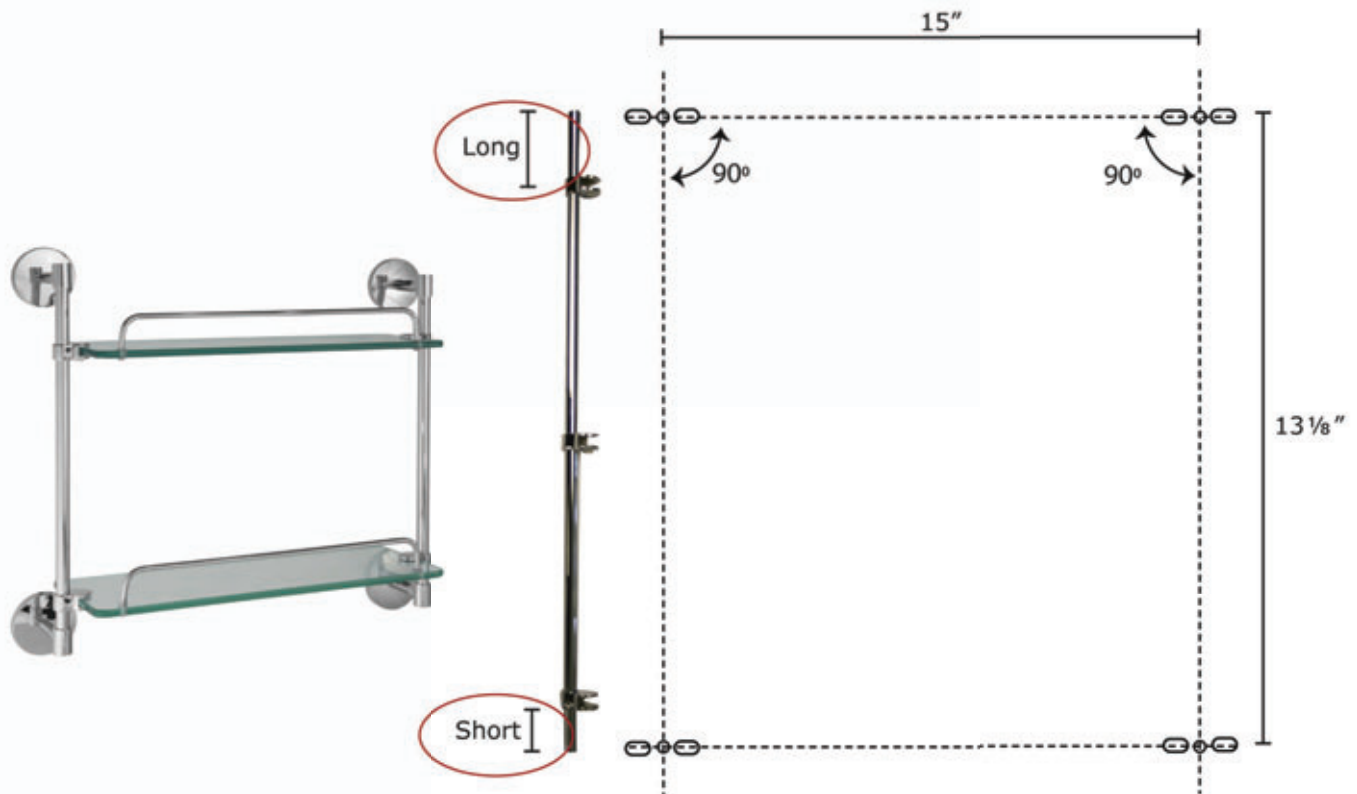

1. Establish a wall area of minimum dimensions: 15½" high x 17¼" wide.
2. Mark centre to centre measurements of 13⅞" high by 15" wide.
3. Loosen set screws and free Mounting Brackets (F) from Wall Flange (G).
4. Position mounting brackets on centre markings with long orientation on horizontal lines.
5. Mark the top and bottom holes to establish where the wall plugs (B) will be positioned.
6. Insert self-tapping wall plugs using Phillips screw driver. Fasten wall brackets using the 1¼" screws provided. (C)
7. **Take note of Shelf Supports (E). There is a long and short distance between end of the bracket and the shelf attachment.**
8. Attach the Shelf Supports to the Wall Brackets. The long end is at the top and the short end is at the bottom. Tighten the set screws at the bottom of the wall flanges.
9. Install Shelf Rail (H) to Glass Shelf (I).
10. Insert Glass Shelf into the right-hand and left-hand Shelf Supports and secure with the plastic White Set Screws located at the underside of the shelf attachment.



LaLOO ACCESSORIES
laloocanada.com
866.305.2566
SERVICE@laloocanada.com

INSTALLING ACCESSORIES


Anchoring in Drywall

Accessories mounted on drywall need to be firmly anchored or they will eventually loosen. Position the accessory at the desired height and then use an electronic stud finder to locate studs in the area.

If installation on a stud(s) is not possible, install drywall plug(s) for mounting brackets.

If possible, position the accessory so at least one mounting screw can go into a stud and then trace the accessory mounting hole(s) onto the wall.

Level the mounting bracket.

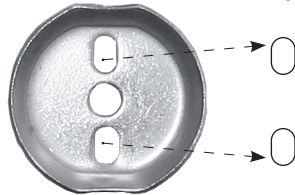

If the accessory requires a second mounting bracket, measure the centre to centre distance to second bracket. Use a level to confirm the plane between both brackets. Trace the mounting hole(s).



Drill or punch appropriate-sized holes for either screws or wall plugs. Install wall plugs as needed.



Attach the accessory firmly to the mounting bracket using set screws. Take care not to over-tighten as they can strip out.



Anchoring for Additional Support

Please note that some accessories in the LaLOO offering specifically require **support backing**.

Install a 2x4 brace (or a 2x6 brace for grab bar installation) between studs at the predetermined desired height of the accessory.



Anchoring in Tile

Use tubular plastic anchors (not provided) to hold accessories firmly in place when installing into tile affixed to concrete backer board. Use a carbide glass/ tile bit to drill pilot holds. Tap in the anchors and fasten the mounting bracket with screws. (Use tapered anchors for tile installed on drywall.)

